



Equilibrators Table

Equilibrator	PB5A	PB5H	PB5E	VB5A	VB5B	PB15H	PB15C	PB100C	PB100E	PB100F-1	PB100H	PB100N	PB100T	PB100T-1	PB100K	PB500C
3150		S				X				X	X	X		X		
4000	S	X				X	X	X	S	X	X	X		X		S
4011	S	X				X	X	X	S	X	X	X		X		S
4041	S	X				X	X	X	S	X	X	X		X		S
4201	S	X	X			X	X	X	S	X	X	X		X		S
4205	S	X				X	X	X	S	X	X	X		X		S
4256	S	X				X		S		X	X	X		X		S
4400	S	X				X	X	X	S	X	X	X		X		S
4402	S	X				X	X	X	S	X	X	X		X		S
5026	S	X				X	X	X	S	X	X	X		X		S
5027	S	X				X	X	X	S	X	X	X		X		S
5033	S	X				X	X	X	S	X	X	X		X		S
5040	S	X				X	X	X	S	X	X	X		X		S
5051	S	X				X	S	X	S	X	X	X		X		S
5076	S	X				X	X	X	S	X	X	X		X		S
5101		S				X		S		X	X	X		X		S
5151		S				X		S		X	X	X		X		
5211		X				S		S		X	X	X		X		
5250		X				S		S		X	X	X		X		
5260		S				X		S		X	X	X		X		
5270		S				X				X	S	X		X		
5315		S				X				X	S	X		X		
5320		S				X		S		X	X	X		X		
5330				S	X					S		X				
5400N					S							S				

S = Standard Equilibrator for this sensor

X = Other Equilibrators that are compatible with this sensor

Equilibrators Table (continued)

Equilibrator	PB5A	PB5H	PB5E	VB5A	VB5B	PB15H	PB15C	PB100C	PB100E	PB100F-1	PB100H	PB100N	PB100T	PB100T-1	PB100K	PB500C
5501		S				X		S		X	X	X		X		
5511		S				X		S		X	X	X		X		
5515		S				X		S		X	X	X		X		
5526		S				X		S		X	X	X		X		
5555		X				S		S		X	X	X		X		
5570	S	X				X	X	X	S	X	X	X		X		
5620N		X				X		S		X	X	X		X		
5630N	S	X				X	X	X	S	X	X	X		X		
5800	S	X	X			X	X	X	S	X	X	X		X		S
6010N		S				X				X	S	X		X		
6077	S	X				X	X	X	S	X	X	X		X		S
6220	S	X	X			X	X	X	S	X	X	X		X		S
6230	S	X	X			X	X	X	S	X	X	X		X		S
6300	S	X	X			X	X	S				X		X		
6501								S			X					S
6505								S			X					S
6900	S	X	X			X	X	X	S	X	X	X		X		S
7101										S		X		X		
7202												S				
7501	S	X				X	X	X	S	X	X	X		X		S
8001		S				X		S		X	X	X		X		
8050								S								
8100	S	X	X			X	X	X	S	X	X	X		X		S
8110	S	X	X			X	X	X	S	X	X	X		X		
8150		S	X			X		S		X	X	X		X		

S = Standard Equilibrator for this sensor

X = Other Equilibrators that are compatible with this sensor

Equilibrators Table (continued)

Equilibrator	PB5A	PB5H	PB5E	VB5A	VB5B	PB15H	PB15C	PB100C	PB100E	PB100F-1	PB100H	PB100N	PB100T	PB100T-1	PB100K	PB500C
8155			S							X		S				
8404										X	S	X	X	S		
8406		S								X	S	X	X	S		
8408		S											S	S		
8540															S	
9500	S	X				X	X	X	S	X	X	X		X		S
9550	S	X				X	X	X	S	X	X	X		X		S
9801	S	X				X	X	X	S	X	X	X		X		
9830		S				X		S		X	X	X		X		
9850	S	X				X	X	S	X	X	X	X		X		S
9851	S	X				X	X	S	X	X	X	X		X		
9855N	S	X				X	X	X	S	X	X	X		X		S
9857N	S	X				X	X	S	X	X	X	X		X		S
9858																
9901			S									S				
9920			S													

S = Standard Equilibrator for this sensor

X = Other Equilibrators that are compatible with this sensor

+1.617.464.4282

1.800.248.3669

info@tekscan.com

www.tekscan.com/pm